


Instruction wire exchange




1. Pull up the pulley tube:

- Insert the wire through the elongated holes in the square profile and under the pulley wheel.

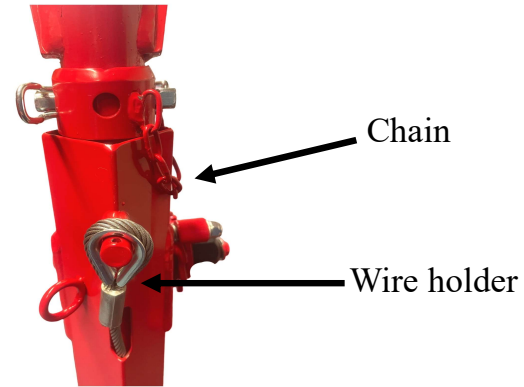


2. Install the wire:

- Place the wire on the wire holder. Pull out the entire wire at the roller to ensure it is not twisted.
- Push down the pulley tube so that the wire is drawn in. Check that the chain for the pin is on the right side.

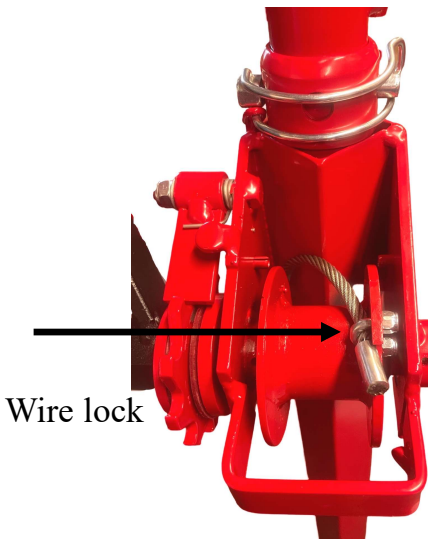

3. Install the wire lock:

- Lower the wire lump into the bottom of the notch in the wire roller, **not against the wire lock** (leave about 6 mm of space between the wire lump and the wire lock). The wire should be detached from the wire holder during installation.
- Tighten the nuts securely and drive the wire lump into the notch in the roller.

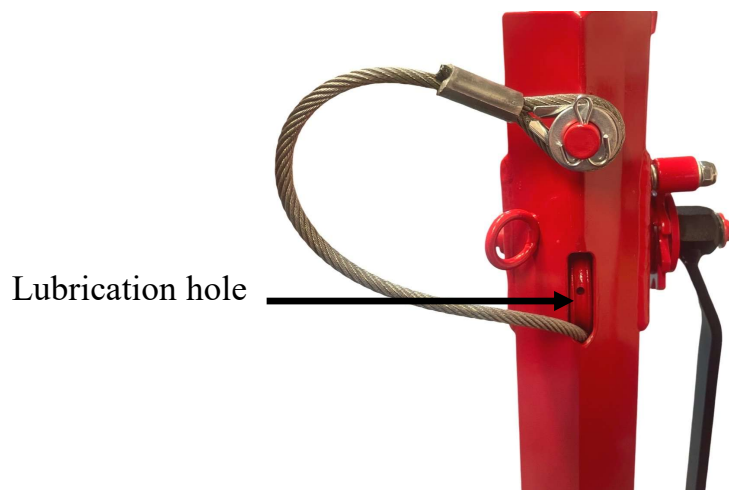

4. Lubricate the wire pulley:

- Pull out the pulley tube and fold the wire to the side.
- Rotate the wire pulley until the lubrication hole becomes visible and apply lubricant into the hole.

Maintenance:

- With constant use, the wire pulley should be lubricated at least 12 times a year, as well as all bushings for the shafts.
- When using the tool occasionally, lubricate as needed or at least twice a year.
- Keeping the wire pulley and bushings well-lubricated is essential for the tool's efficiency and lifespan.